




BINOCULAR HARNESS PRO PACK

OPERATING INSTRUCTIONS

01 | Remove the binocular harness strap from the pack. Buckle the netted shoulder straps to the top of the pack. Buckle the mid-section straps of the harness to the bottom of the pack.

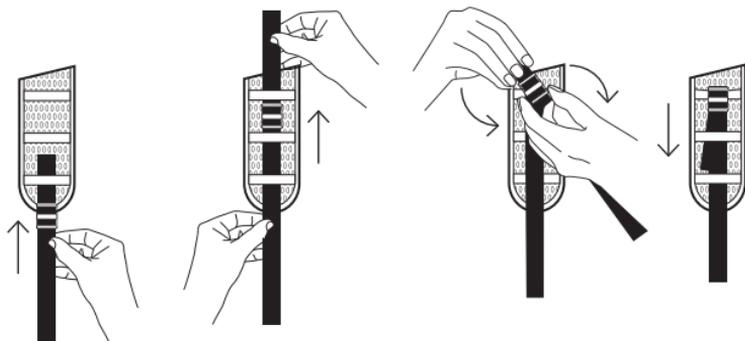

02: Pack is fully adjustable at shoulder straps. To adjust, loosen the tether strap and feed underneath the adjustment loops to the desired height. Once at desired height, wrap the tether strap over the top of your selected adjustment loop on the shoulder strap and feed back through the plastic quick slide release. Feed the remaining strap under the lower adjustment loops.

03: Once your shoulder straps are adjusted to your desired length, then adjust your mid-section straps to fit.

04: Additional adjustments to the shoulder straps can be made by adjusting the lower portion of the bino harness attachment strap.

The remaining strap can be fed up through the loops if desired to stow them away.



BINOCULAR HARNESS PRO PACK

OPERATING INSTRUCTIONS

05: Range finder / accessories pouch is removable and can be moved to either side of the binocular pack using the MOLLE system. MOLLE is available on the bottom of the pouch for additional attachments.



06: Binocular tether straps are provided with the pack and can be removed by the buckle if desired. To use, feed the strap through the hole on the side of your binoculars, then feed the strap back through the plastic quick slide release.

07: A strap is tethered inside the range finder / accessories pouch, providing security while in use and is also equipped with a quick release buckle. To use, unbuckle the strap and feed the thin string through the hole on your range finder and loop back over the buckle and rest of the strap. Buckle the strap back to the tether.

www.hawkeoptics.com

 Born in the UK